

Glow Fire Uranus

> GLOW FIRE

Uranus



Language	Titel	Page
DE	Bedienungsanleitung; Modell: Uranus	2
ENG	Assembly Instructions; Model: Uranus	12
FR	Instructions de montage; Modèle: Uranus	21
IT	Istruzioni di montaggio; Modello: Uranus	31
ES	Instrucciones de montaje; Modelo: Uranus	41
PG	Instruções de montagem; Modelo: Uranus	51
PO	Instrukcje składania; Model: Uranus	61
NL	Montage-instructies; Model: Uranus	71
DK	Monteringsvejledning; Model: Uranus	81

 


ENG

> GLOW FIRE

Instruction manual Modell: Uranus

> Stand: 09/2020 Version: 1






Important safety instructions!

Warning!

When using electrical equipment, basic precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

 - Read all instructions before operating this heater.
- The heater is hot during operation. To avoid burns, do not touch the hot surface. When transporting this heater, use handles, if available. Keep flammable materials, such as furniture, pillows, bedding, paper, clothing and curtains at least 1 meter away from the front, back and side walls of the heater. To avoid overheating, do not cover the heater.
- Extreme caution is required when a heater is used near children or disabled persons and when the heater is left unattended.
- Always unplug the heater when not in use.
- Do not use the heater if cables or plugs are damaged or the heater malfunctions or has been dropped. In this case, submit the heater to an authorized service center for inspection, electrical or mechanical adjustment or repair.
- Use indoors only, not outdoors.
- This heater is not intended for use in bathrooms, laundry rooms and similar areas. Never place the heater where it can fall into a bathtub or other water container.
- Do not run the cable under carpets. Do not cover the cable with carpets, runners or similar covers. Do not place the cable in passages and avoid tripping.
- To disconnect the heater, turn off the controls, then unplug the power cord.
- Do not insert any foreign objects into the ventilation or outlet openings as this may result in electric shock or fire or damage to the heater.
- To prevent possible fire, never block the air inlet or outlet. Do not use on soft surfaces, such as beds, where the openings can be blocked.
- A heater has hot and sparking parts inside. Do not use in areas where gasoline or flammable liquids are stored.
- Use this heater only as directed. Any other use is not recommended by the manufacturer as it may cause fire, electric shock or injury.
- DANGEROUS HIGH temperatures can be generated under certain abnormal conditions. Do not partially or completely cover or block the front of this heater.
- The lamps should only be replaced when the heater is disconnected from the power supply.
- This device must not be used by persons (including children) with reduced physical, sensory or mental abilities or lack of experience and knowledge, unless they are under the supervision or instruction of a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- CAUTION: To prevent hazards due to inadvertent thermal cutout, do not power this appliance through an external switching device such as a timer, or connect it to a circuit that is regularly turned on or off by the power company.



Remove all parts and hardware from the box and place on a clean, soft, dry surface. Parts and assembly steps are grouped together for hanging or installation in recesses. Check the parts list to ensure that nothing is missing. Dispose of the packaging properly. If possible, recycle.



You will need the following tools (not included): Phillips screwdriver, beam locator, spirit level, drill, 1/4" wood drill, hammer.

4000000000

Parts and Hardware



B – Wood screws



A- heating fireplace

0	0	0
	0	





E – Wall bracket (attached to the back of the fireplace)

තරකානයා

Remote control

G – Jewelry quartzes

Installation and assembly

Your device is a wall mounted device. Choose a suitable place that is not susceptible to moisture and away from curtains, furniture and passageways. **NOTE: Comply with all national and regional electrical codes.**

Minimum distance from flammable objects

Measurements are made from glass front

Тор	39.4" (1000mm) zum Kaminsims
Тор	39.4" (1000mm) zur Decke
Bottom	0"
Pages	0"
Rear	0"


Minimum distances from the mantelpiece

WARNING

WHEN USING PAINT OR VARNISH ON THE MANTELPIECE, PAINT OR VARNISH MUST BE HEAT-RESISTANT TO PREVENT DISCOLORATION.




Side-View

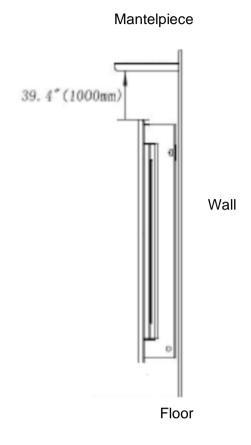


Wall mounting

Because many different materials are used on different walls, it is strongly recommended that you consult your local building contractor before mounting this unit on the wall.

 - a) Choose a location that is not exposed to moisture and at least 36" (914 mm) away from flammable materials such as curtains, furniture, bedding, paper, etc.
- b) Two people must hold the unit against the wall to determine the final position.
- c) Place the unit upside down on a soft, non-abrasive surface. Remove the bracket from the back of the unit by loosening the screws, see Figure 1.
- d) Mark the position, then fix the bracket(s) to the wall with the screws provided. The hooks on this bracket MUST be facing up and level.

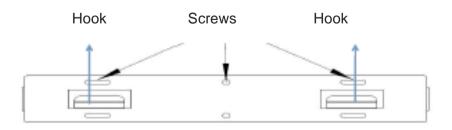






NOTE: It is strongly recommended to screw the bracket (E) into the wall posts if possible. If the wall posts cannot be used, make sure that the supplied plastic dowels are used to fix the bracket to the wall and that the bracket is sufficiently secured.

- e) When the wall bracket is installed, two persons must lift the unit and insert the slots on the back of the unit into the hooks of the bracket and lock the two screws on both sides
- f) Check the stability of the device and make sure that the bracket cannot fall off the wall.

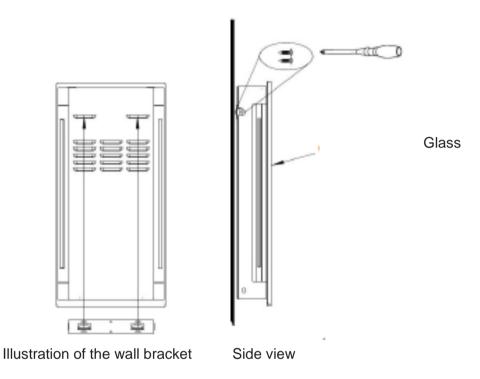

Installation of the quartz embers



A. You must remove the glass front and the unit must be mounted in its final position before the quartzware is installed.

B. Carefully place the quartz embers in the bottom tray at the front of the heater, as shown in the illustration.

Apply an even layer from side to side. Figure



Operating


Read and understand the entire manual, including all safety instructions, before plugging in or using this product. Failure to do so may result in fire, electric shock, serious injury or death.

Power supply

Connect the power cord to 220~240 volts (see **IMPORTANT SAFETY INSTRUCTIONS** on **pages 2 and 3**). Make sure the sockets are in good condition and the plug is not loose. **NEVER** exceed the maximum current rating for the circuit. **DO NOT** connect other equipment to the same circuit.

Functionality

This electric fireplace can be operated via the TOUCH CONTROL PANEL at the front of the fireplace or via the battery operated REMOTE CONTROL. Operation and functions of both methods are identical. Please read the **IMPORTANT SAFETY INSTRUCTIONS** and observe all warnings before operating.

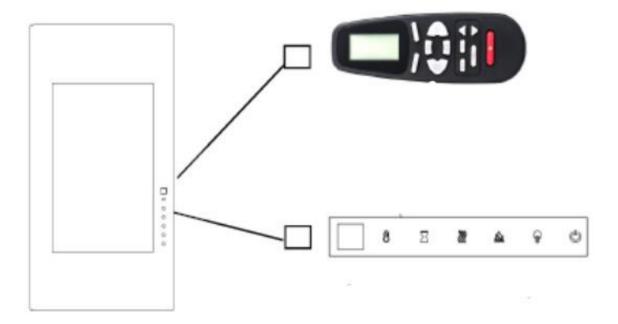

Touch control panel and remote control

Кеу	Function	Action and display
Power supply	ON: Activates control panel	1. Press once. Indicator light
\bigcirc	functions and remote control. Switches the flame effect on.	switched on. Power supply switched on. All functions activated.

GLOW FIRE >

Glow Fire Uranus

	I	
	OFF: Disables control panel functions and remote control. Turns the flame effect off.	2. Press again. Flame effect switched off. Machine in standby. All functions switched off.
Timer	TIMER button: Controls timer settings to turn off the heater at the selected time. Setting range from 0.5 to 8 hours.	 Press once. Indicator light switched on. Timer is set to 0.5 hours. Press again until the desired setting is reached. Display lamps indicate the setting.
Flame	FLAME button: Makes the flame effect darker and brighter. NOTE: Flame effect will remain on until the power button is turned off. Flame effect must be on to turn the heater on.	 Press once. The brightness of the Flame effect changes. Press again until the desired setting is reached.
Color	COLOR button: The color of the flame effect changes. NOTE: Flame effect color will remain until the Power button is turned off. The Flame Effect color must be on to turn the heater on.	 Press once. The color of the flame effect changes. Press again until the desired setting has reached a total of 3 colors.
Temperature	TEMPERATURE button: Switches the heating on and off. NOTE: Press the button for 5 seconds, the temperature setting switches from °C to °F. In the same way from °F to °C.	 Press once: touch control panel display is activated Press again: until the desired setting is reached. Digital display shows setting cycles, see below:
Heater	HEATING key: Switches the heating on and off. NOTE: The heater only works when the flame effect is on. If the flame effect is off, the heater will not turn on. NOTE: To prevent overheating, the heater fan blows cold air for 8-10 seconds before the heater turns on and after it turns off.	 press once. The control lamp lights up. Blower blows cold air for 10 seconds. The 750 W heater switches on and blows out warm air. press again. The control lamp lights up. The 1500W heater turns on and blows out warm air. press again. The heater switches off. The blower blows cold air for 10 seconds, allowing the heater to cool down and then switches off.
Back Lights	BACKLight button: Changes the color of the backlight NOTE: The rear lights remain on until the power switch is turned off. Works only when touched on the control panel.	 Press once. Flame color effect changes. Press again until the desired setting is reached. 3 colors. Press the third time, the backlight is switched off.



Note	When the heater is put into operation for the first time, a slight odour may occur.
	This is normal and should not occur again unless the heater is not used for a
	longer period of time.

Note	To improve operation, point the remote control towards the front of the fireplace. DO NOT press the buttons too quickly . Allow the appliance time to respond
	to commands.

Temperature limiting control

The heater is equipped with a temperature limiting control. If the heater reaches an unsafe temperature, the heater will automatically switch OFF. Reset:

- 1. pull the power plug from the socket.
- 2. set the ON/OFF switch to ON and the TOUCH CONTROL PANEL to OFF Wait 5 minutes.
- 3. Inspect the fireplace to make sure that no ventilation openings are blocked or clogged by dust or lint. In this case, clean the ventilation openings with a vacuum cleaner.
- 4. turn the ON/OFF switch to OFF and reconnect the power cord to a wall outlet.
- 5. If the problem persists, have the outlet and wiring inspected by a qualified technician.

Battery instructions for the remote control

The remote control uses ONSCR2025 battery (included) Temperaturbegrenzungsregelung



NEVER throw the batteries **into a fire.** Failure to observe this precaution may result **in an explosion**. Dispose of the batteries at your local collection point for hazardous materials.

Care and maintenance

٨	ALWAYS turn the heater OFF and unplug the power cord from the wall outlet before cleaning, servicing or transporting this heater. Failure to do so may result in fire, electric shock or injury.
$\overline{\sqrt{1}}$	NEVER immerse or spray in water. This may result in fire, electric shock or injury.

Metal:

- Clean with a soft cloth moistened with a citrus oil based product.
- **DO NOT** use brass polish or household cleaners because these products will damage the metal bar.

Glass:

• Spray a high-quality glass cleaner on the cloth or towel. Dry thoroughly with a paper towel or lint-free cloth.



• **NEVER** use abrasive cleaners, spray mist or other cleaners that can scratch the surface.

Ventilation openings:

• Remove dust and dirt from the heater and ventilation areas with a vacuum cleaner.

Plastic:

- Wipe with a slightly damp cloth and a mild solution of detergent and warm water.
- **NEVER** use abrasive cleaners, spray or other cleaners that can scratch the surface.

Maintenance



Danger of electric shock! NEVER OPEN the panels! Contains no userserviceable parts! ALWAYS turn the heater OFF and unplug the power cord from the wall

outlet before cleaning, servicing or transporting this heater. Failure to do so may result in fire, electric shock or injury.

Electrical and moving parts:

- The blower motors are lubricated in the factory and do not require lubrication.
- Electrical components are integrated in the chimney and cannot be maintained by the customer.

Storage:

• Store the heater in a clean, dry place when not in use.



WARNING! DO NOT MAINTENANCE the internal or electrical parts from the customer. Do not service the unit yourself.



Meaning of the crossed-out dustbin:

Never dispose of electrical appliances as unsorted municipal waste, use separate collection points. Contact your local government regarding the existing collection systems. If electrical equipment is disposed of in landfills or waste dumps, hazardous substances can enter the groundwater and enter the food chain, which can affect your health and well-being.

If you replace old equipment with new, the dealer is legally obliged to take back your old equipment for free disposal.